
SPAESCORT**

HYDRAULIC LIFT

#8241

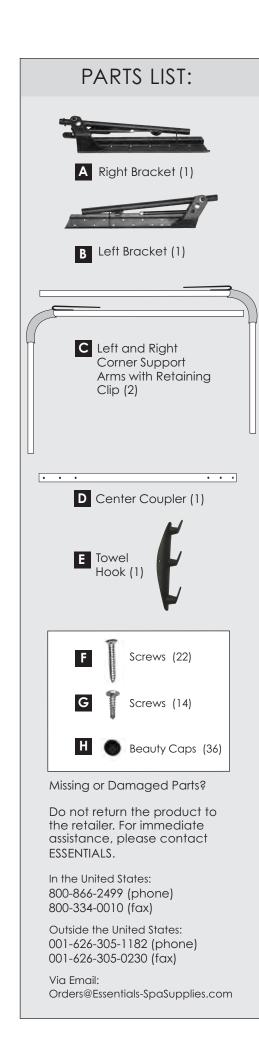



Put the spa COVER properly in position on the spa in the closed position. The COVER LIFT will be mounted in the same direction as the cover hinge (see completed overhead below left). Now, push the cover towards the

front of the spa for easy access to the side mounting bracket locations.






Attach the RIGHT BRACKET [A] using 11 SCREWS [F] as shown. Brackets should be located immediately under the acrylic edge of the spa, and within 4"-6" (10-15cm) from the rear of the spa. For spas with large radius corners, you can skip the first 2 holes and insert only 9 Screws. Repeat on other side with LEFT BRACKET [B].




Note: To avoid splitting a wood spa cabinet, it is recommended you pre-drill the holes.

Insert the RETAINING CLIP on the RIGHT CORNER SUPPORT ARM under the hinge in spa cover (1). Slide CENTER COUPLER over the RIGHT CORNER SUPPORT ARM (2). Slide the LEFT CORNER SUPPORT ARM into the other end of the CENTER COUPLER (3) while sliding the RETAINING CLIP of the LEFT CORNER SUPPORT under the cover hinge (4).

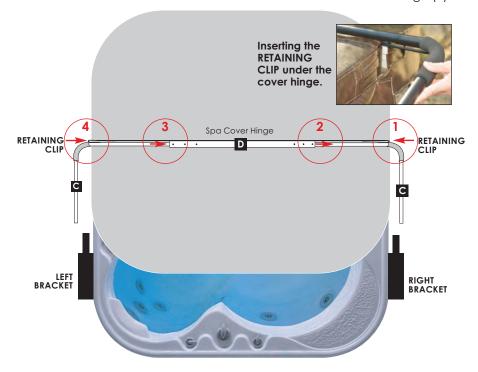


4

Line the completed Center Coupler Assembly next to the center seam of the cover. Pull the SPA COVER and completed assembly slowly back towards the LEFT AND RIGHT BRACKETS. Insert CORNER COUPLERS into BRACKET ARMS.

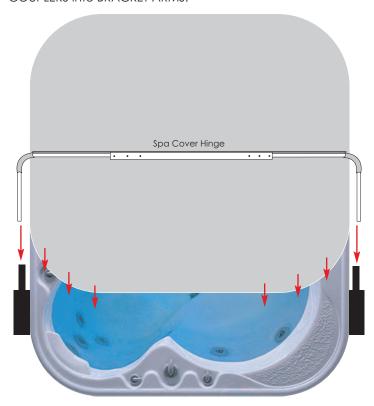

5

Confirm the spa cover is properly on the spa and all four corners are aligned. With the completed Cover Lift frame in place on spa cover, secure all pieces with 12 SCREWS [G] as indicated below. Snap BEAUTY CAPS [H] on all SCREWS [F] and [G]. Prior to attaching the hydraulic, manually flip the spa cover back and into the upright and open position. Snap the hydraulic over the BALL JOINT (see photo right) and the lift is ready for use!

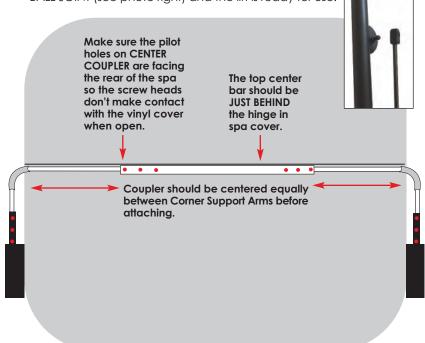

SPECIAL REFERENCE:



Important Safety Feature: The Spa Escort Hydraulic Assist Lift is equipped with a Safety Lock that prevents the lid from shutting when in the open position. To close the cover, simply lift the Safety Lock.



Bonus! Towel Hook
The Spa Escort Hydraulic Assist
Lift includes a FREE Towel
Hook. With the cover in the
OPEN position, simply poistion
the Towel Hook on the upright
support and attach using
2 Screws [G].

MISSING OR DAMAGED PARTS

If there are any missing or damaged parts, please do not return product to retailer. Contact us for immediate replacement.

ONE YEAR WARRANTY

ESSENTIALS warrants this product to be free from defects in WORKMANSHIP and MATERIALS for a period of ONE YEAR. Should a part fail under normal use within this period, ESSENTIALS will replace the defective part(s) FREE of charge.

Cost of repair, removal or re-installation, or any consequential damages are not covered under this warranty.

EXCLUSIONS

Warranty extends only to the original purchaser and is based on normal usage conditions. This warranty does not extend to any damages from abuse, misuse, improper installation, abnormal usage, fading with minor deteriorations caused by exposure to the environmental factors or use of chemical substances.

Do not leave the lift open when not in use or during times of windy conditions.

ESSENTIALS is not responsible for incidental or consequential damages arising from the use or performance of the product.

Some states do not allow the exclusion or limitation of incidental or consequential damages. Accordingly, the above limitation may not apply to you. The warranty extended hereunder is in lieu of any and all other warranties and any implied warranties. This warranty gives you specific legal rights.



Essentials is an industry leader in spa accessory and maintenance products.

To view our complete product offering, visit us at

Essentials-SpaSupplies.com.

All items can be ordered through your local spa retailer.